
TEC-9 Assembly




Putting the firing pin, and striker into the bolt. Note the extra spring I used to increase tension on the striker.

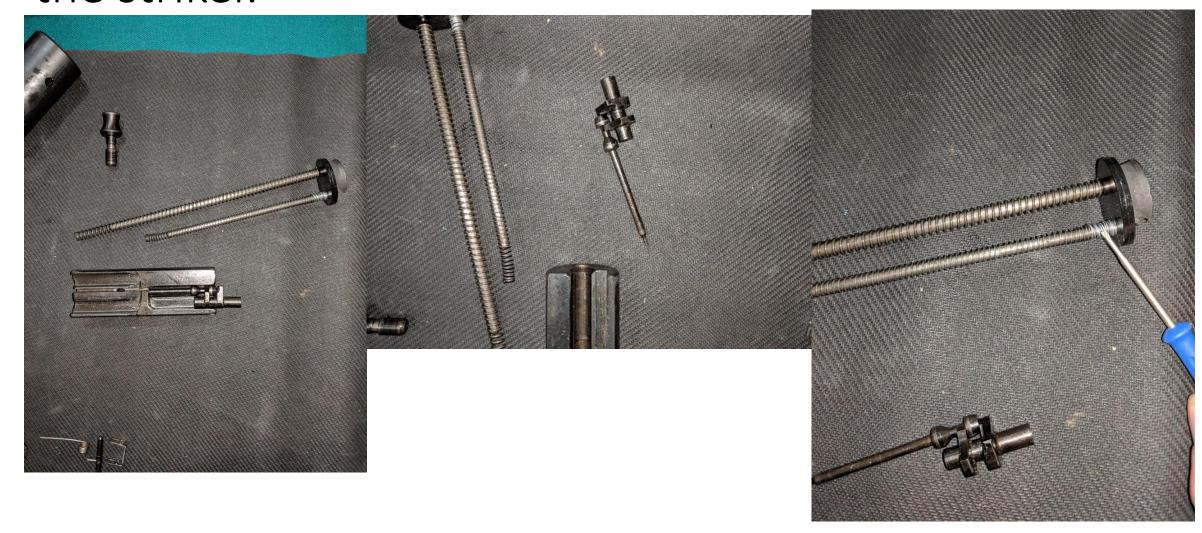


Insert the bolt into the upper receiver and lock it in by inserting the charging handle. After that simply screw on the end cap



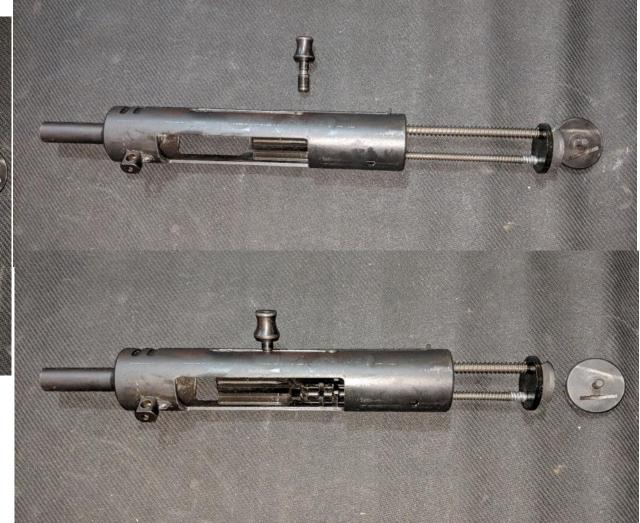


Get the upper, lower, and parts kit ready. the Glock Mag Catch and Spring can be installed at any point.

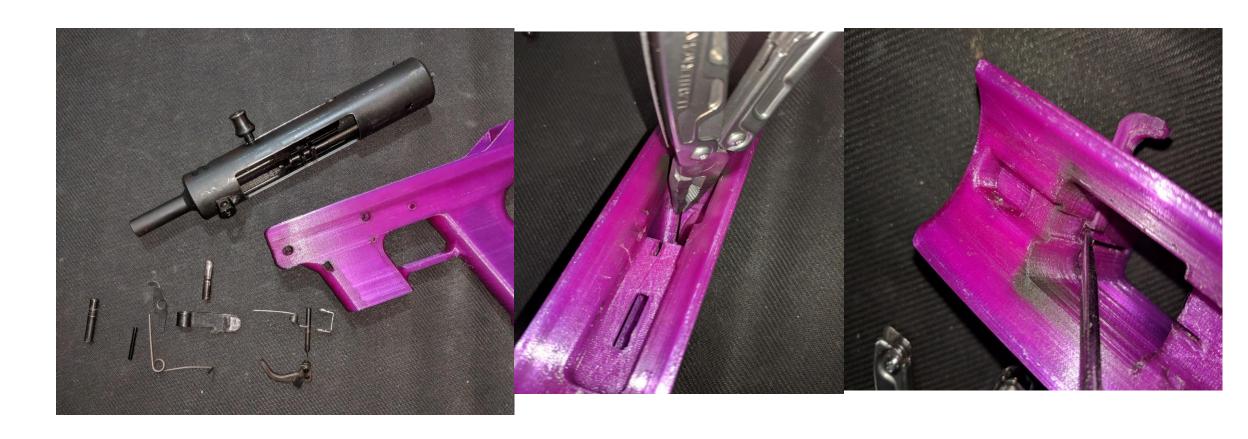


Insert the Trigger Axis pin, and slide on the Sear Retainer, and the Trigger Spring.




Drop in the trigger, and push the axes pin the rest of the way through. Make sure the disconnector Spring is under the pin. Then use a screwdriver to get the trigger Spring around the disconnector Axis pin.

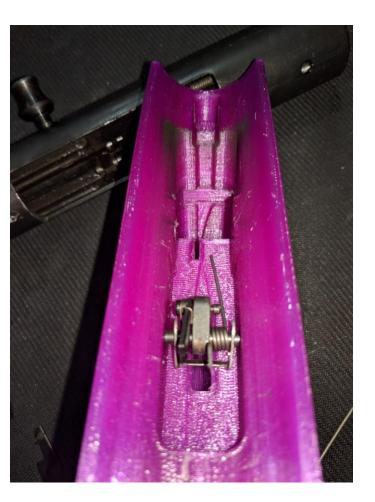


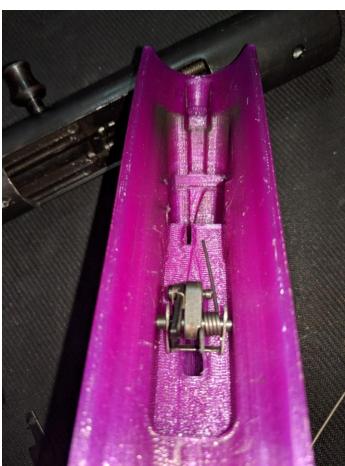




Slide the sear under the sear retainer.

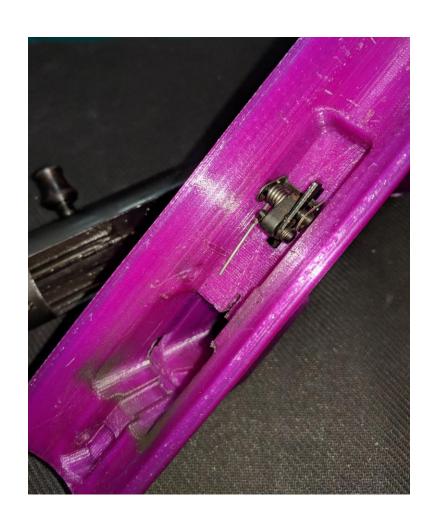

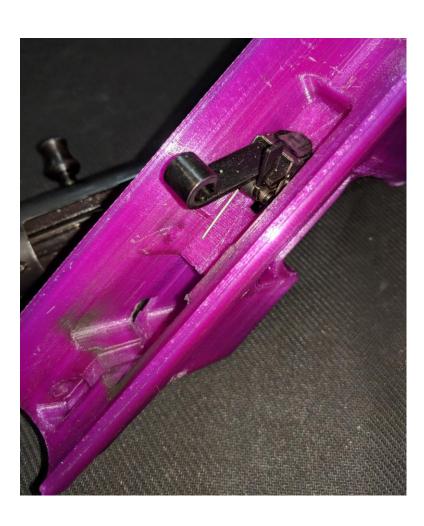

Hook the sear spring under the sear, then begin to push the sear axis pin through.

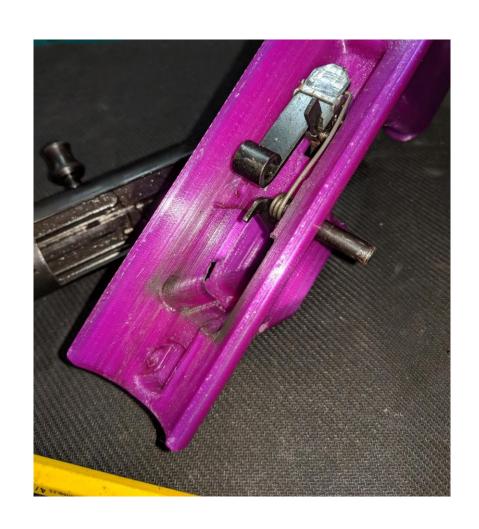

Put the pin through the lower hole that was drilled into the ejector before continuing to push the sear axis pin into the ejector.

Line up the sear and finish pushing the sear axis pin through.




Line up the upper receiver and push the assembly pin through the lower and upper to secure them together. Applying oil to all pins before assembly will make less force required for tapping

pins in.





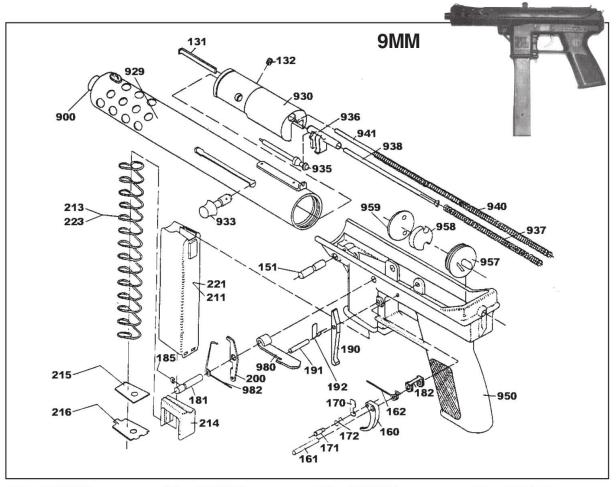

| KEY# | DESCRIPTION | KEY | # DESCRIPTION | 1 | KEY# | DESCRIPTION | 1 | KEY# | DESCRIPTION |
|------|---------------------|-----|-----------------------|---|------|-----------------------------|---|------|--------------------------------|
| 131 | Extractor | 190 | Magazine Catch | | 929 | Receiver, Upper | | 957 | Disk Cap, Rear |
| 132 | Extractor Screw | 191 | Magazine Catch Axis | | 930 | Bolt | | 958 | Buffer |
| 151 | Assembly Pin | 192 | Magazine Catch Spring | | 933 | Operating Handle Assembly | | 959 | Buffer Plate |
| 160 | Trigger | 200 | Ejector | | | Operating Handle Spring, NI | | 980 | Sear |
| 161 | Trigger Axis | 211 | Magazine Body | | 935 | Firing Pin | | 982 | Sear Spring |
| 162 | Trigger Spring | 213 | Magazine Spring | | 936 | Striker | | 2 | Assembly Catch, NI |
| 170 | Disconnector | 214 | Follower | | 937 | Striker Spring | | - | Barrel Adaptor, NI |
| 171 | Disconnector Axis | 215 | Magazine Lock Plate | | 938 | Striker Guide | | | Grip Screw, Nut & Lock Washer, |
| 172 | Disconnector Spring | 216 | Magazine Bottom Plate | | 940 | Recoil Spring | | | Front, NI |
| 181 | Sear Axis | 221 | Magazine | | 941 | Recoil Spring Guide | | - | Sling Catch, NI |
| 182 | Sear Retainer | 223 | Magazine Spring | | 950 | Lower Receiver (a/k/a Grip | | 2 | Snap Ball, NI |
| 185 | E-Ring | 900 | Barrel | Į | | Frame) | 1 | * | Snap Spring, NI |